RemoteDP DIFFERENTIAL PRESSURE SENSOR



The Remote DP Sensor has been designed for cleanroom operations with an IP67 rated housing and easy field service features. The Remote DP Sensor combines a flexible field selectable range, output and calibration options. A local display allows for cleanroom personnel to easily identify room specifications before entering sterile rooms.

The Remote DP Sensor has an accuracy of $\pm 1.0\%$ or can come with a more sensitive 0.5% accuracy over the full range. The sensor has been designed for easy on-site installation and comes in wall, cabinet and duct mounted versions with fixed or extended probes to enable installation in challenging situations. The Remote DP Sensor uses a stainless steel capacitive design with an advanced capacitive element which provides excellent reliability and stability with low measuring ranges available.

FEATURES

- 4 to 8 Selectable Field Ranges
- Enhanced Sensor Protection
- Simple On-site Installation
- Wall, Cabinet or Duct Mounted
- Cleanroom Wipe Down
- Local Display
- IP67 Enclosure
- 2 Year Warranty



RemoteDP Sensor Specifications

Performance Data	DP-0.5	DP-1.0
Field Selectable Ranges	±0.1" WC (±25 Pa)	±0.1" WC (±25 Pa)
(Bidirectional)	±0.25" WC (±50 Pa)	±0.25" WC (±50 Pa)
		Model for Higher Pressure Applications
		±0.5" WC (±100 Pa)
		±1.0" WC (±250 Pa)
		±2.5" WC (±500 Pa)
		±5.0" WC (±1,000 Pa)
Accuracy Scale	±0.5% Full Scale	±1.0% Full Scale
Long Term Stability (max.)	1.0% FS/YR	2.0% FS/YR

Physical Description


Case	Fire-Retardant Polycarbonate (UL 94 V-0 Approved),		
	Hinged Lid		
Display	4 Digit LCD		
Mounting	Wall/DIN or Duct Mounting		
Electrical Connection Block	Removable Screw Terminal		
Pressure Fitting	3/16" O.D. Barbed Brass		
Zero	Push Button		
Span	Push Button		
Weight (approx.)	8 Ounces		

Environmental Data

Operating Temperature

Electrical Data

Excitation Range	13 to 30 VDC/18 to 24 VAC (Voltage Output) 13 to 30 VDC
	(4 to 20mA output at terminals)
Current Consumption	30mA (max)
Mis-Wiring	Reverse Excitation Protection
Field Selectable Output	0 to 5 V, 0 to 10V (3-wire), 4 to 20mA (2-wire)
Output Resistance (Voltage Output) 10 Ohms (max)
Load Resistance (Voltage Output)	10 K-Ohms (min)
Loop Resistance (4-20mA)	0 to 800 Ohms
Approval	CE & RoHS Compliant

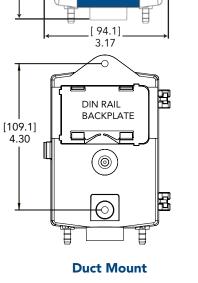


Wall Mount

[80.4] 3.17

Differential Pressure

Ξ

[138.5] 5.45

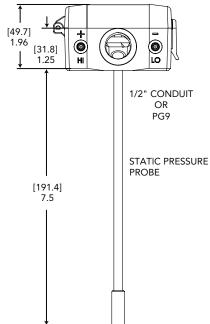

Distributed By:



32 to 122°F (0 to 50°C)

Lighthouse Worldwide Solutions reserves the right to change specifications without notice.

www.golighthouse.com info@golighthouse.com 1-800 945 5905 (Tollfree) 1-541 770 5905 (Outside of USA)

